ASSEMBLY INSTRUCTIONS

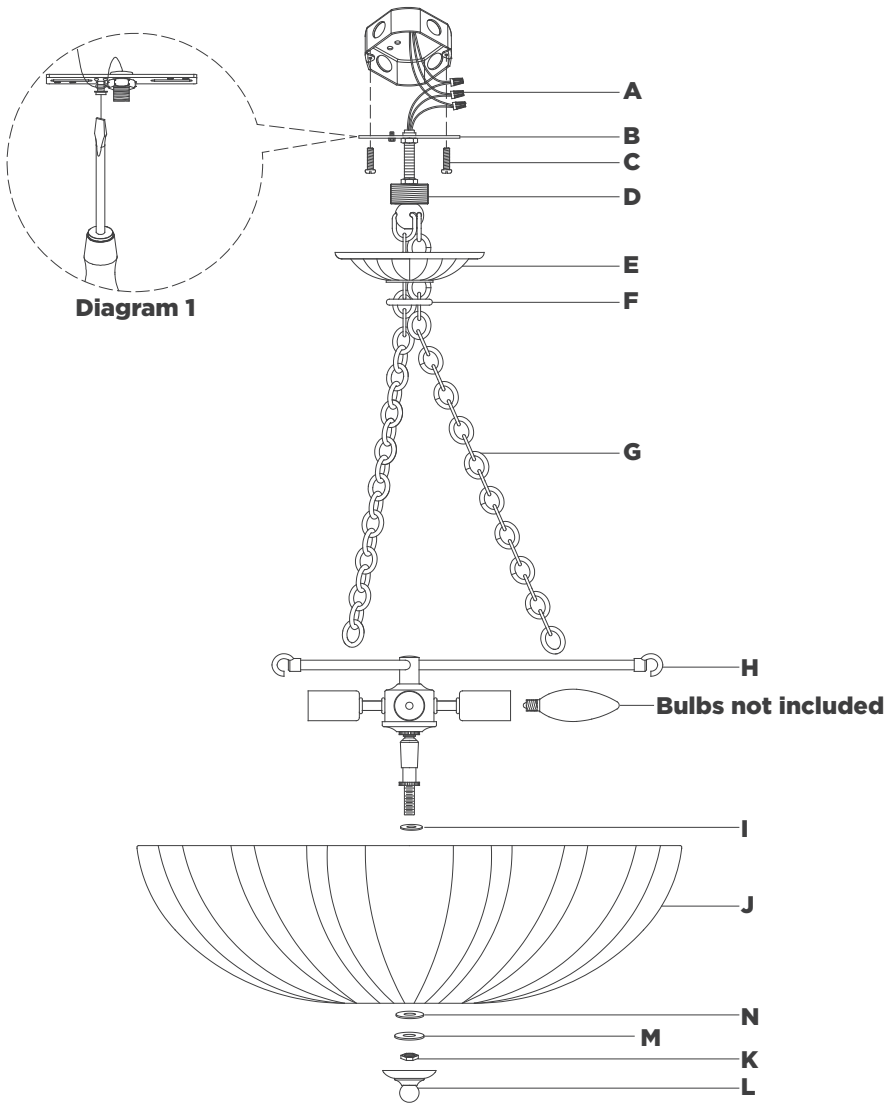


Diagram 1

Rosehill Large Chandelier

Item # ARN5111

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Measuring Tape	Chain Pliers
Wire Cutters		

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(B)** from canopy **(E)** by removing collar ring **(F)**.
3. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**.
4. Determine desired overall length, and amount of chains **(G)** needed. Shorten chain using chain pliers. (Keep extra chain)
5. Secure collar loop **(D)** to mounting plate **(B)** using pliers to tighten locknut.
6. Let canopy **(E)** and collar ring **(F)** through chains **(G)**, then install canopy **(E)** to collar loop **(D)** and secure with collar ring **(F)**.
7. Attach chains **(G)** to fixture hooks **(H)**.
8. Thread fixture wire and ground wire through chain **(G)**. **NOTE:** When you reach the collar loop **(D)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box.
9. Separate two sides of molded wire, and strip insulation on each 5/8”.

ASSEMBLY INSTRUCTIONS

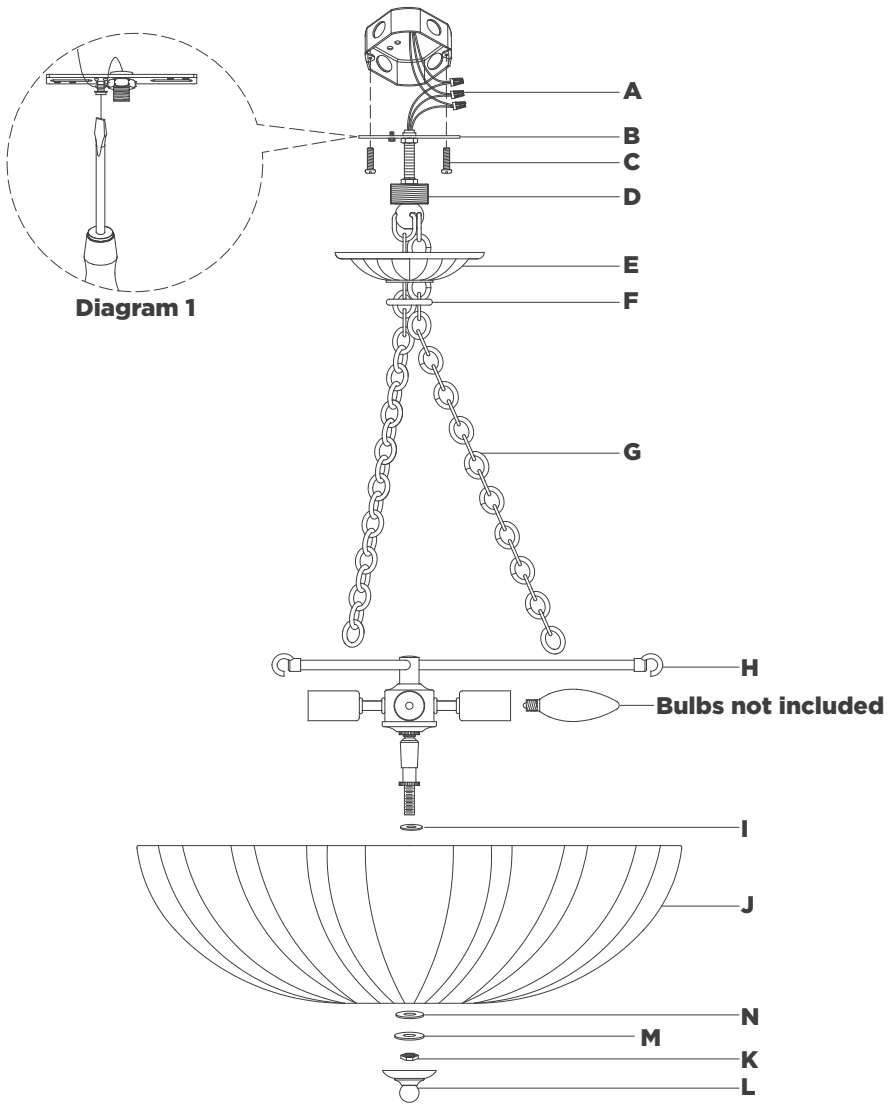


Diagram 1

Rosehill Large Chandelier

Item # ARN5111

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

10. Loosen collar ring **(F)** and let canopy **(E)** slip down chain **(G)** carefully.
11. Twist all fixture wires together, and slip through center hole of collar loop **(D)**.
    NOTE: Untwist wires and separate to prepare for connection.
12. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.
    NOTE: It is imperative that the fixture is grounded.
13. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
14. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.
    CAUTION: Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck into the junction box.
16. Install canopy **(E)** to collar loop **(D)** and secure with collar ring **(F)**.
17. Install light bulbs into the sockets.
18. Attach rubber washer **(I)** to stem, then install glass **(J)** to stem and secure with rubber washer **(N)**, metal plate **(M)**. and hex nut **(K)**.
19. Thread finial **(L)** to bottom of stem.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.

Intertek DAMP 4