ASSEMBLY INSTRUCTIONS

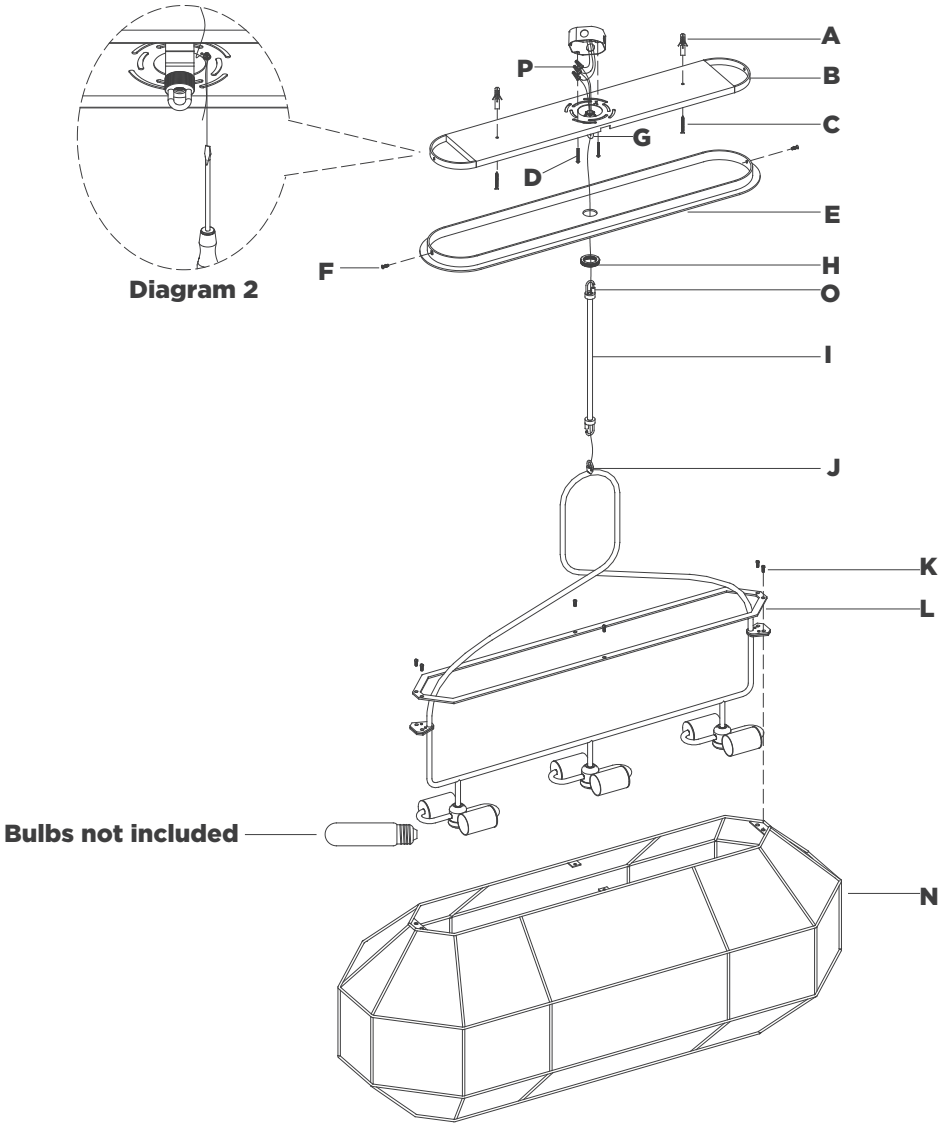


Diagram 2

Forza Medium Gathered Linear Lantern

Item # KW5317

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Hammer	Pencil
Drill		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove canopy **(E)** from mounting plate **(B)** by removing collar ring **(H)** and screws **(F)**.
3. Using mounting plate **(B)** as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(A)** into the holes using a hammer.
5. Install mounting plate **(B)** to the junction box and secure with mounting screws **(D)**, then secure wood screws **(C)** to anchors **(A)**.
6. Install canopy **(E)** to mounting plate **(B)** and secure with collar ring **(H)**.
7. Feed electrical wires through rod **(I)** and connect to fixture loop **(J)** and collar loop **(G)** using links **(O)**. Secure quick links **(O)** (see diagram 1).
   NOTE: When you reach the collar loop **(G)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box.
8. Separate two sides of molded wire, and strip insulation on each 5/8”.

ASSEMBLY INSTRUCTIONS

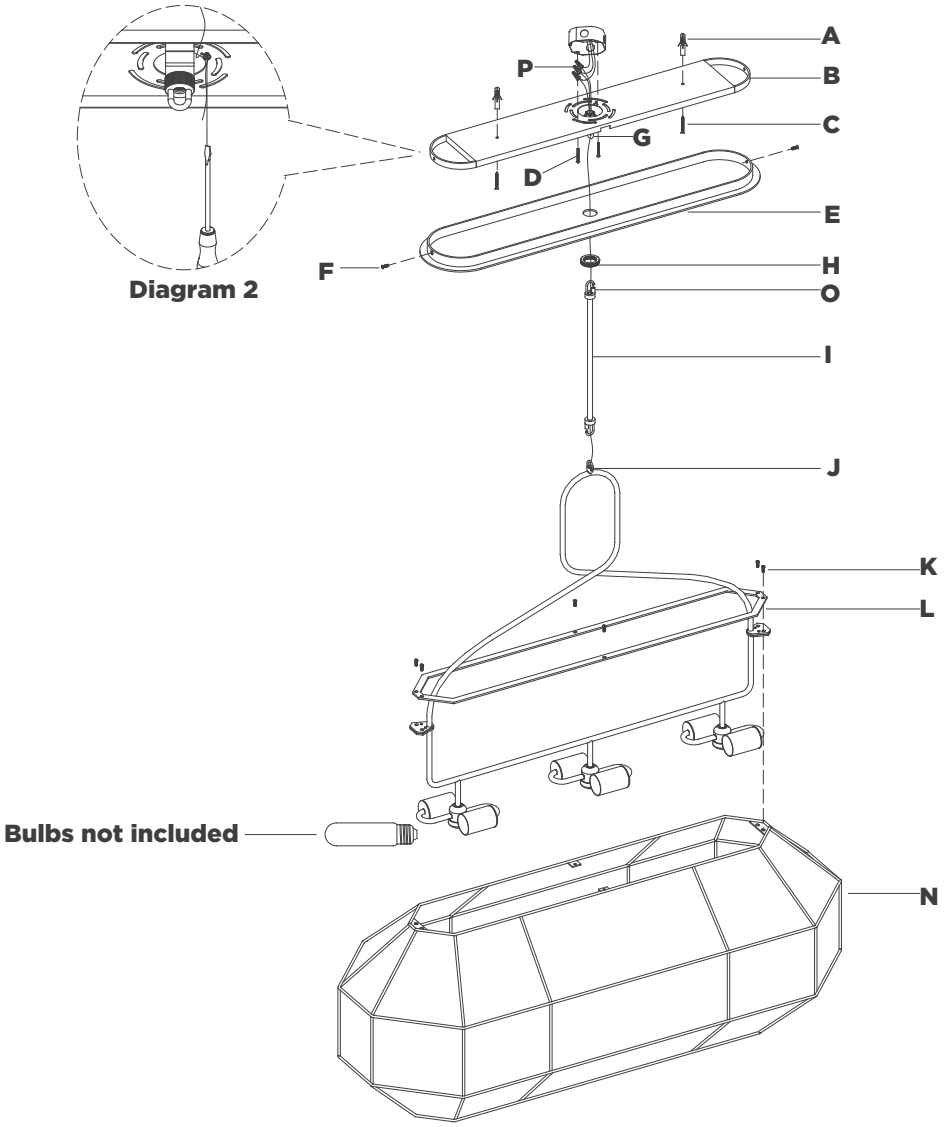


Diagram 2

Forza Medium Gathered Linear Lantern

Item # KW5317

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

9. Loosen collar ring **(H)** and let canopy **(E)** slip down rod **(I)** carefully.
10. Twist all fixture wires together, and slip through center hole of collar loop **(G)**.
    NOTE: Untwist wires and separate to prepare for connection.
11. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 2). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(P)**.
    NOTE: It is imperative that the fixture is grounded.
12. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(P)**.
13. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(P)**.
    CAUTION: Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
15. Install canopy **(E)** to mounting plate **(B)** and secure with collar ring **(H)** and screws **(F)**.
16. Install light bulbs into the sockets.
17. Install shade **(N)** to fixture frame **(L)** and secure with screws **(K)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.