
ASSEMBLY INSTRUCTIONS

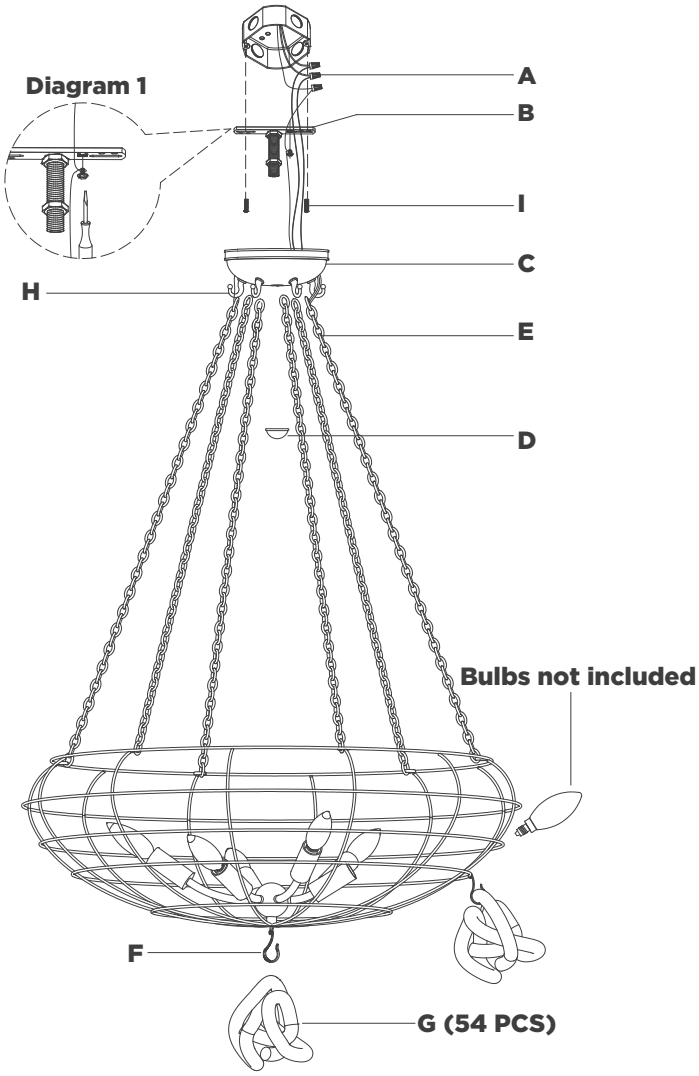

Aurelie 30" Chandelier

Item # MF5080

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Measuring Tape	Chain Pliers
Wire Cutters		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Install mounting plate **(B)** to the junction box and secure with mounting screws **(I)**.
3. Determine desired overall length, and amount of chains **(H)** needed. Shorten chains using chain pliers. (Keep extra chain)
4. Attach chains **(E)** to hooks **(H)** on bottom of canopy **(C)**.
5. Thread fixture wire, ground wire and safety cable through chain **(E)**.


   NOTE: When you reach the canopy **(C)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the junction box. Do not cut safety cable.
6. Separate two sides of molded wire, and strip insulation on each 5/8".
7. Twist all fixture wires together, and slip through center hole of hook **(H)**.

   NOTE: Untwist wires and separate to prepare for connection.


ASSEMBLY INSTRUCTIONS

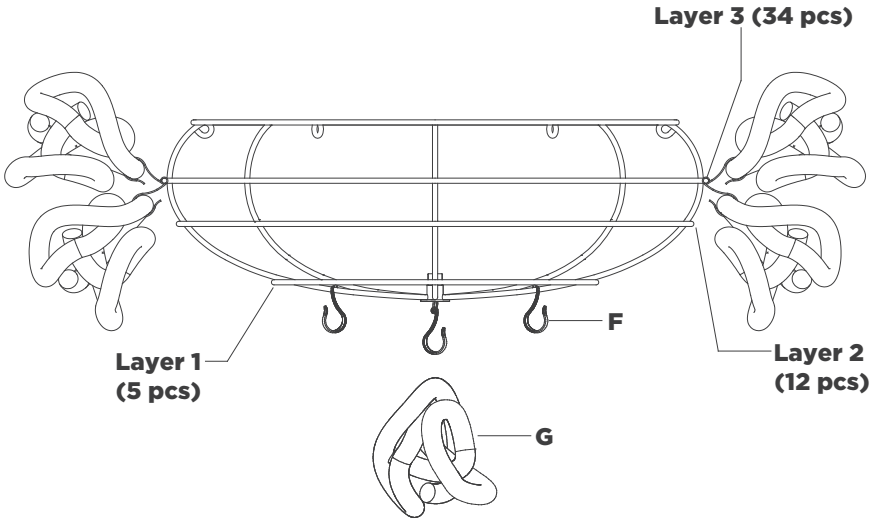

Layer 1

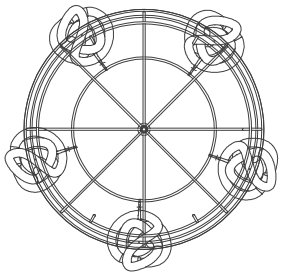

Layer 2

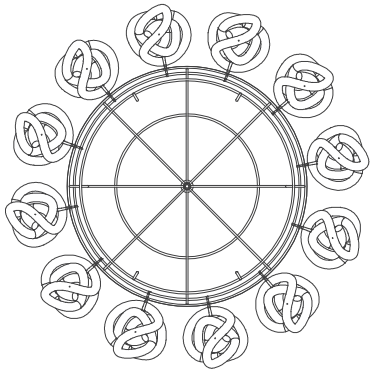

Aurelie 30" Chandelier

Item # MF5080

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

8. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.
   NOTE: It is imperative that the fixture is grounded.
9. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
10. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.
    CAUTION: Do not reverse the hot and neutral connections.
11. Make sure all wire connections are tight, then carefully tuck into the junction box.
12. Install canopy **(C)** to threaded nipple **(B)** and secure with cap nut **(D)**.
13. Install light bulbs into the sockets.
14. Hang trims **(G)** to bottom three hooks **(F)**.
15. Install trims **(G)** from bottom (layer 1) and working your way to the top (layer 3) as shown in figures L1-L3.
    NOTE: Ensure the trims on the L3 are installed in an alternating high-low arrangement as show in diagram.
16. Adjust the positions of the trims **(G)** on each tier as desired.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Aurelie 30" Chandelier

Item # MF5080

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

Layer 3

