## ASSEMBLY INSTRUCTIONS

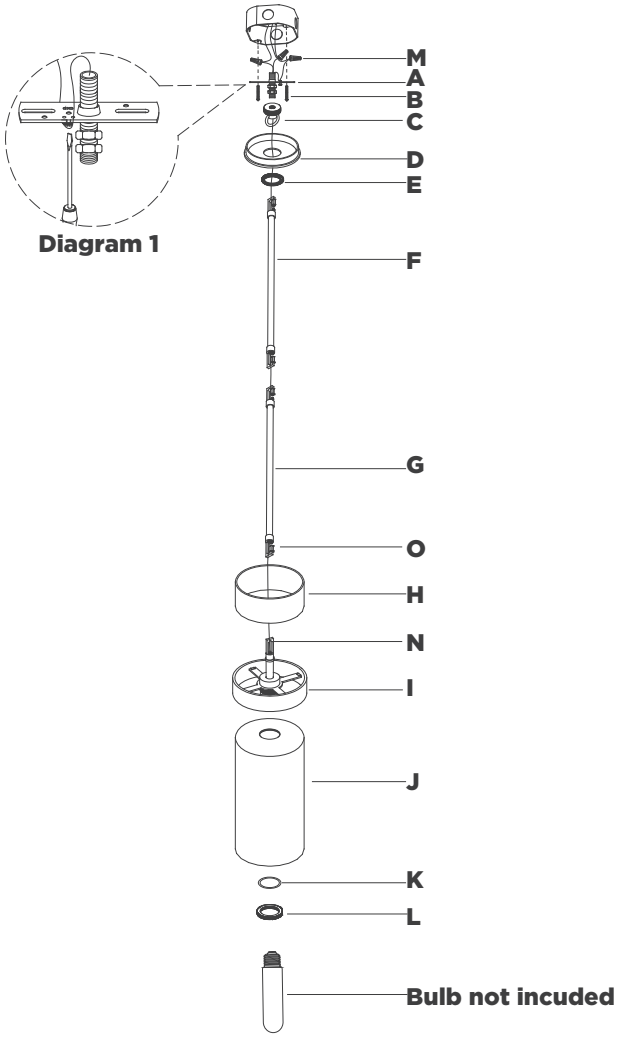



**Diagram 1**

Presidio Small Pendant

Item # S5673

**NOTICE:**

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

**TOOLS REQUIRED (NOT INCLUDED):**

Phillips Screwdriver  Slotted Screwdriver  Wire Strippers

Wire Cutters

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(A)** from canopy **(D)** by removing collar ring **(E)**.
3. Install mounting plate **(A)** to the junction box and secure with mounting screws **(B)**.
4. Secure collar loop **(C)** to mounting plate **(A)** using pliers to tighten locknut.
5. Install canopy **(F)** to collar loop **(D)** and secure with collar ring **(G)**.
6. Place shade cover **(H)** onto top of fixture **(I)**.
7. Feed electrical wires through bottom rod **(G)** and connect to fixture loop **(N)** using quick links **(O)**. Secure quick link **(O)**.
8. Repeat for top rod **(F)**, connecting to bottom rod **(G)**.
9. Attach top rod **(F)** to collar loop **(C)** using quick link **(O)**. Secure quick link **(O)**.
10. Loosen collar ring **(E)** and let canopy **(D)** slip down rods carefully.
11. Twist all fixture wires together, and slip through center hole of collar loop **(C)**.

## ASSEMBLY INSTRUCTIONS

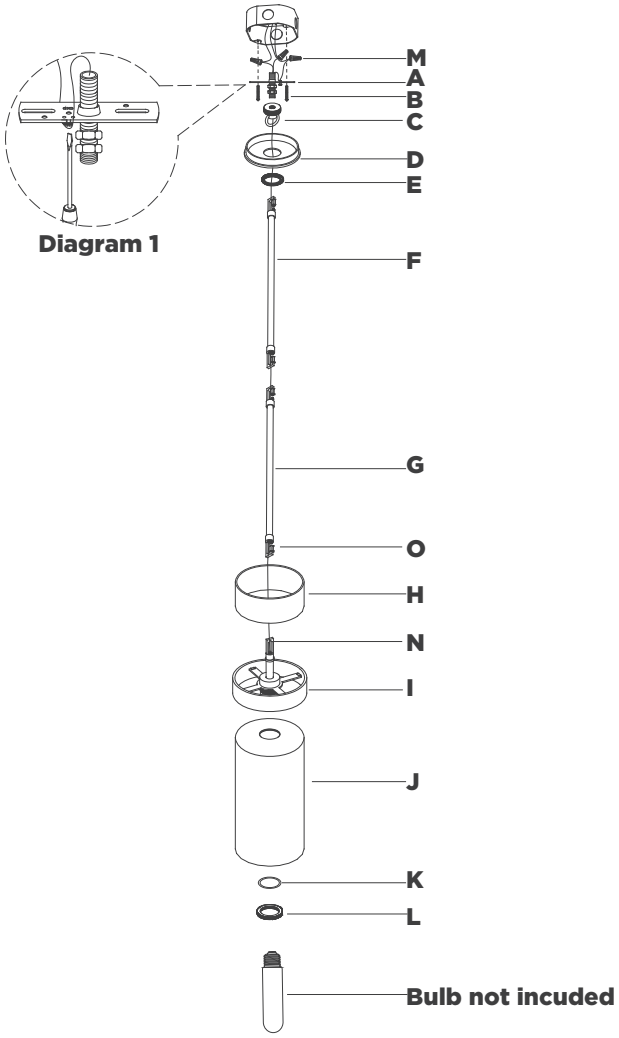



**Diagram 1**

Presidio Small Pendant

Item # S5673

**NOTICE:**

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

12. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
13. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(M)**.
    **NOTE:** It is imperative that the fixture is grounded.
14. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(M)**.
15. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(M)**.
    **CAUTION:** Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight, then carefully tuck into the junction box.
17. Install canopy **(D)** to mounting plate **(A)** and secure with collar ring **(E)**.
18. Remove socket ring **(L)** and rubber washer **(K)** from fixture **(I)**, then install shade **(J)** to fixture **(I)** and secure with rubber washer **(K)** and socket ring **(L)**.
    **NOTE:** Do not overtighten otherwise glass shade could be damaged.
19. Install light bulb into the socket.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.