
ASSEMBLY INSTRUCTIONS

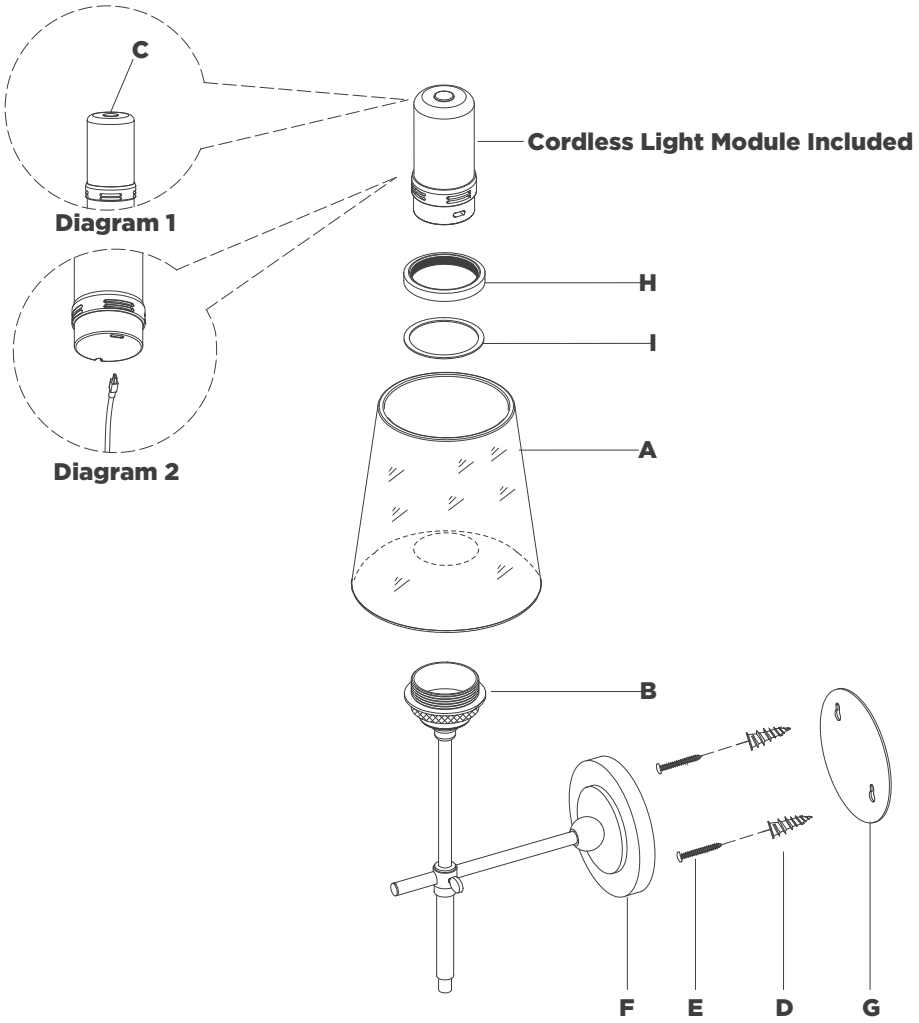

Bryant 15" Cordless Bath Sconce

Item # TOB2039-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

TOOLS REQUIRED (NOT INCLUDED):


Pencil Hammer Drill

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using card template **(G)** as a guide, mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(D)** into the holes using a hammer.
4. Secure wood screws **(E)** to anchors **(D)**, leaving 1/8" of exposed thread in order to hang fixture.
5. Hook fixture **(F)** to wood screws **(E)**.
6. Remove holder ring **(H)** and rubber washer **(I)** from cordless module holder **(B)**, then place shade **(A)** onto top of cordless module holder **(B)** and secure with rubber washer **(I)** and holder ring **(H)**.
7. Place cordless light module into cordless module holder **(B)**.
8. For best results fully charge battery before use.
   NOTE: 10W minimum USB power source recommended.
9. Test the lamp.
   Dimmer switch operation: Touch dimmer **(C)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.

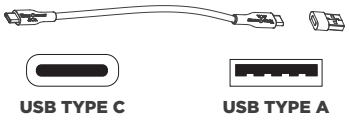

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.

Intertek DAMP LED