
ASSEMBLY INSTRUCTIONS

Diagram 1

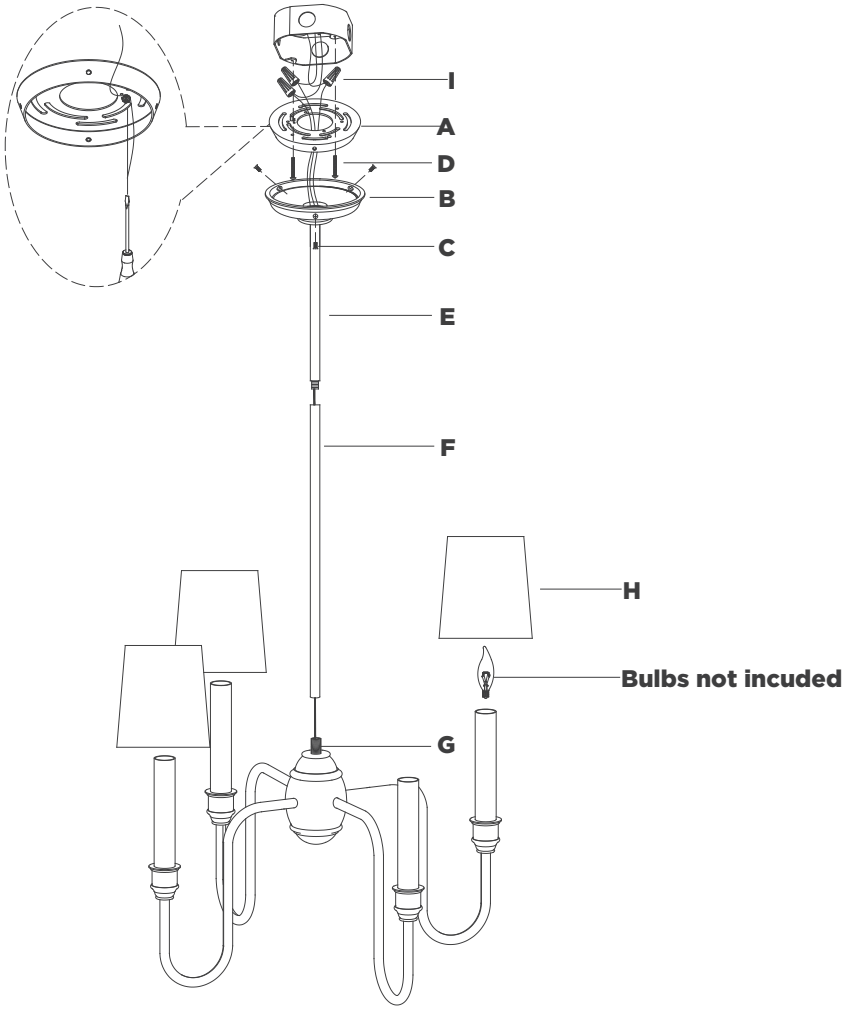

Vendome Small Chandelier

Item # TOB5007

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Wire Strippers

Wire Cutters


---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(A)** from canopy **(B)** by removing screws **(C)**.
3. Install mounting plate **(A)** to the junction box and secure with mounting screws **(D)**.
4. Feed electrical wires through bottom rod **(F)** and connect to fixture body **(G)**.
5. Continue feeding wires through top rod **(E)** and canopy **(B)**, then thread top rod **(E)** to bottom rod **(F)** and thread canopy **(B)** to top rod **(E)**.
6. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
7. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(I)**.
   NOTE: It is imperative that the fixture is grounded.
8. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(I)**.
9. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(I)**.
   CAUTION: Do not reverse the hot and neutral connections.

VISUAL COMFORT & CO.

ASSEMBLY INSTRUCTIONS

Diagram 1

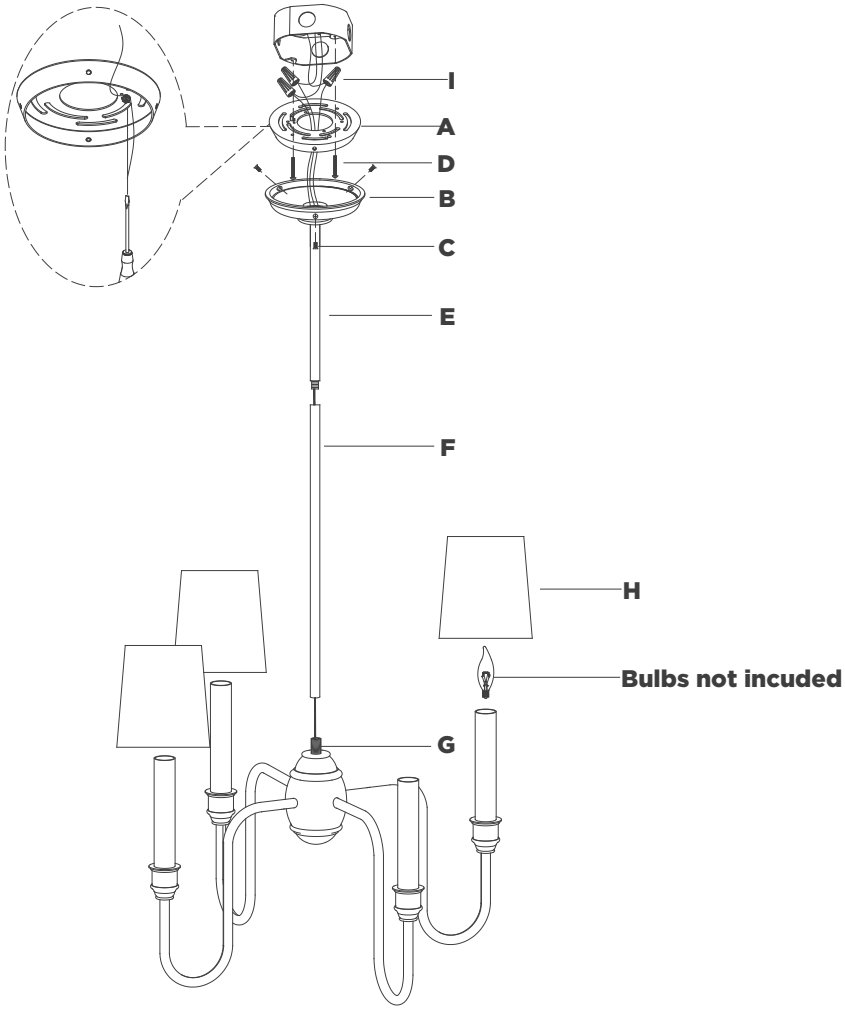

Vendome Small Chandelier

Item # TOB5007

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

10. Make sure all wire connections are tight, then carefully tuck into the junction box.
11. Install canopy **(B)** to mounting plate **(A)** and secure with screws **(C)**.
12. Install light bulbs into the sockets.
13. Clip shades **(H)** onto light bulbs.
    NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.